




Window Net Installation Technique

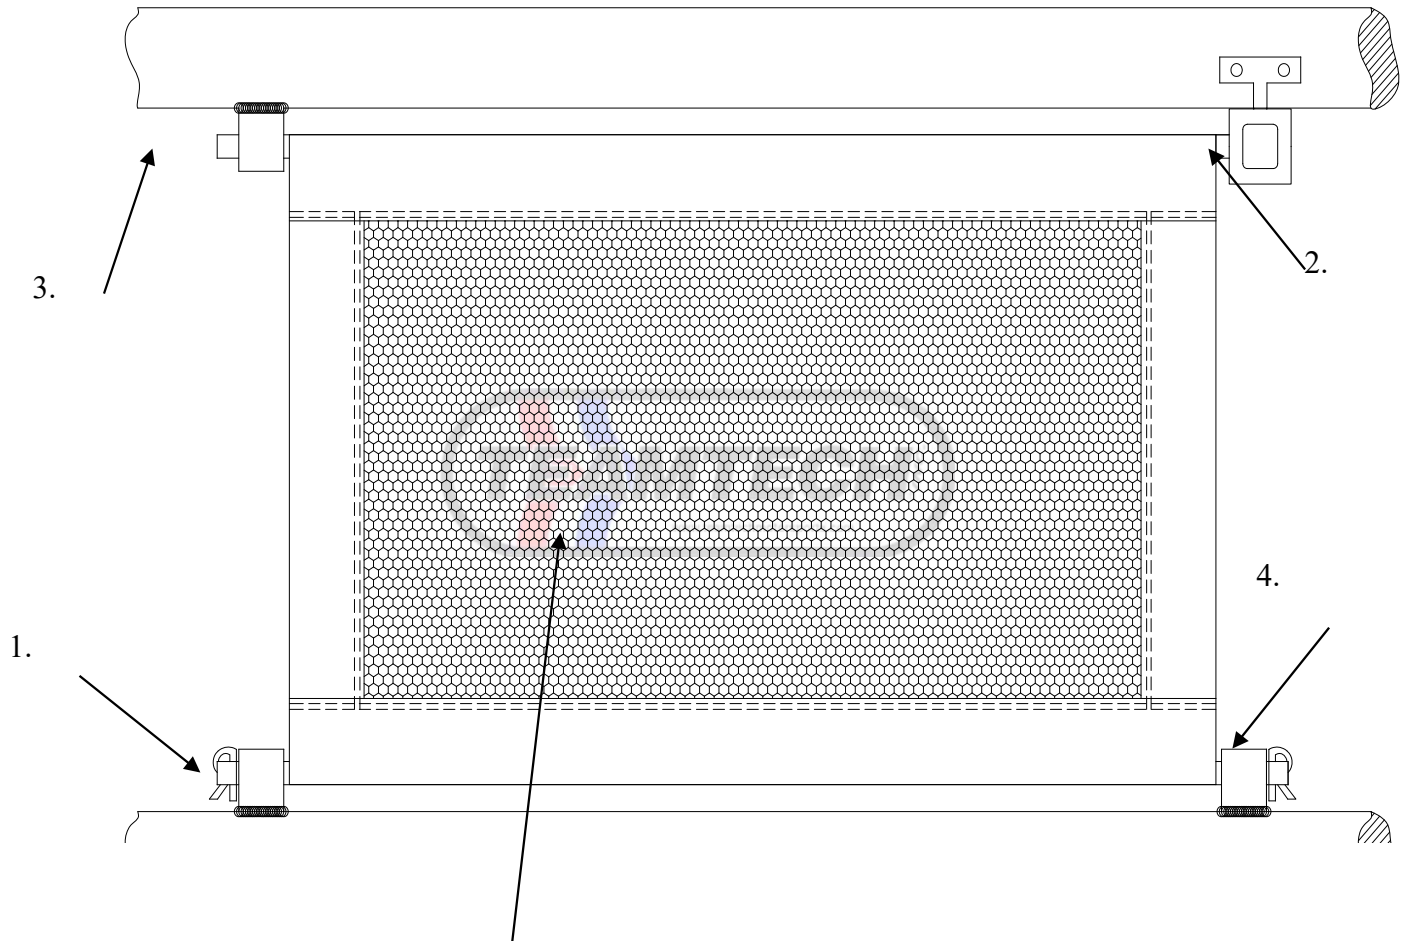

Racers have stenciled names, logos,
and/or numbers on mesh netting.

1. Weld dowel sleeves (both sides) to roll bar.
2. Install automotive seatbelt buckle or 2" latch-link race buckle.
3. Install net as shown using 3/8" chromoly heavy wall tubing or cold rolled solid round stock for increased strength.
4. Use cotter pins on bottom bar.

Our mesh netting construction is U.S. patented (number 5,290,086) by TEAMTECH and has been approved for use by SFI and most all sanctioning bodies.

Install window nets in accordance with the rule book requirements of the sanctioning body for by which you race. Window net must be form fitting on all four (4) sides and form fitting in the center leaving no center sag. **DO NOT USE NYLON TIE WRAPS TO INSTALL WINDOW NET; YOU MUST HAVE A SOLID FIXTURE TO AFFIX THE TOP AND BOTTOM BORDERS.**

Wash net by hand with mild soap and water; lay on towel to air dry. Re-install in vehicle. Replace when faded or damaged. Enjoy your new honeycomb mesh net!